CP-H31A	Primary Server Room Communication Panel					
Comments		Jumper or Internal Cable		Conductor #	Cable	Cable Information
			Switch 3			
		RJ-45 To Switch 2: 01	01			
			02	RJ-45	C-WTPWSCR01-C01	4-Pair #24 AWG - Cat 5E TO WTPWSCR01
			03	RJ-45	C-WTPWSCR02-C01	4-Pair #24 AWG - Cat 5E TO WTPWSCR02
			04	RJ-45	C-WTPWSCR03-C01	4-Pair #24 AWG - Cat 5E TO WTPWSCR03
			05	RJ-45	C-WTPWSCR04-C01	4-Pair #24 AWG - Cat 5E TO WTPWSCR04
Spare			06			
Spare			07			
Spare			08			
•						

