


NORTH


NORTH


NORTH

SOUTHBOUND HENDERSON N/S KIMBERLEY STOP 40428 KIMBERLEY

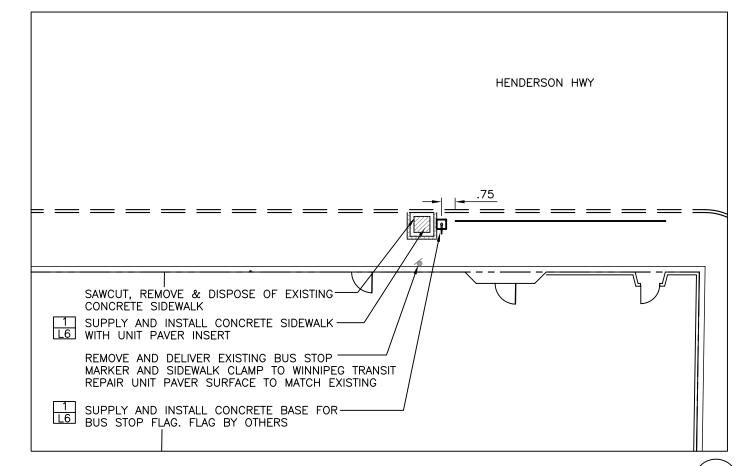


NORTHBOUND HENDERSON N/S JOHNSON STOP 40370 JOHNSON

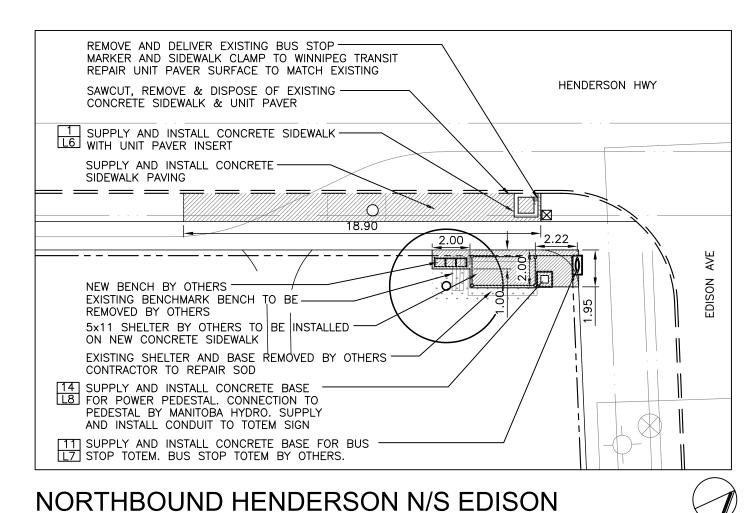


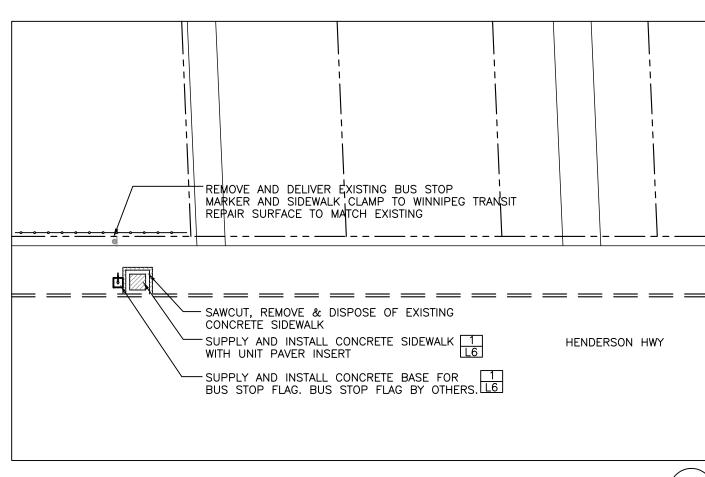

## SOUTHBOUND HENDERSON OPP. SUTTON STOP 40416 SUTTON

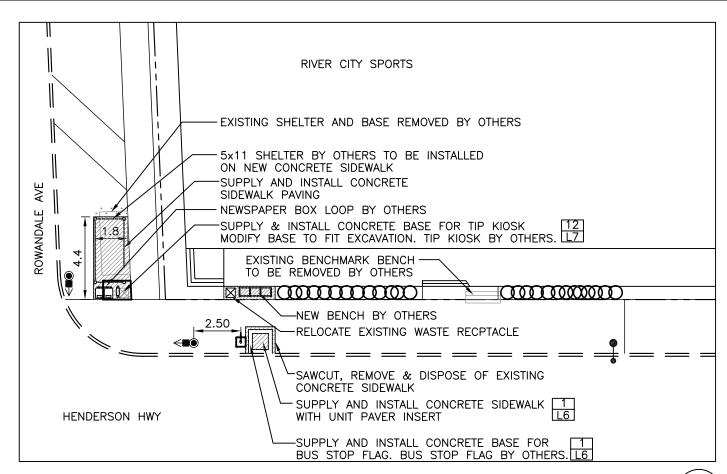


SOUTHBOUND HENDERSON N/S ROWANDALE STOP 40421 ROWANDALE

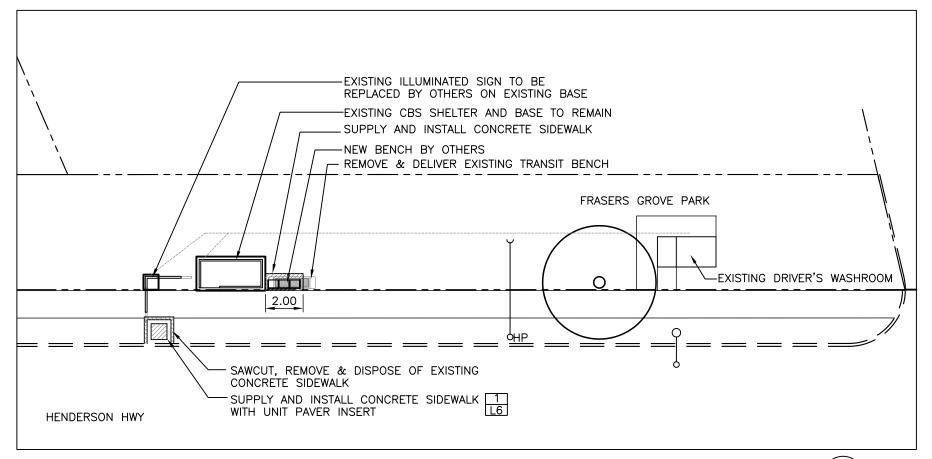

SOUTHBOUND HENDERSON F/S FRASER'S GROVE STOP 40423 NORTHDALE



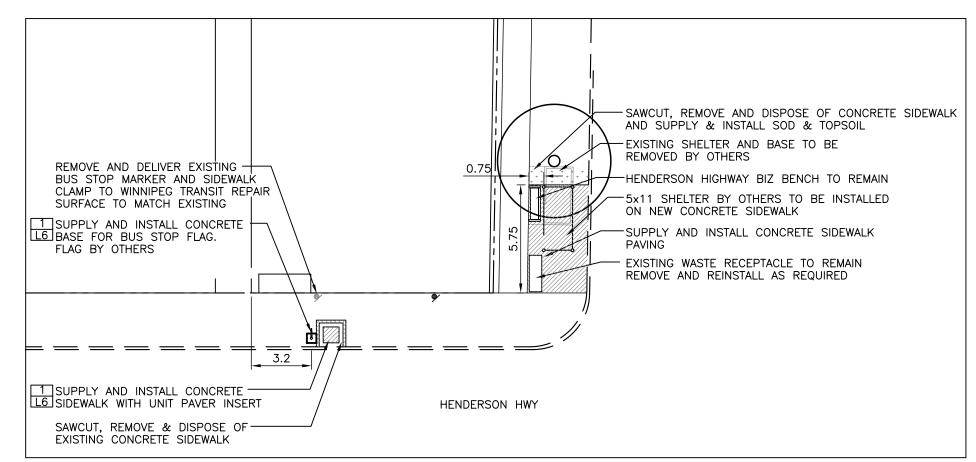

NORTH


NORTH

NORTH


HENDERSON HWY

IROQUOIS DEVELOPMENTS LTD.



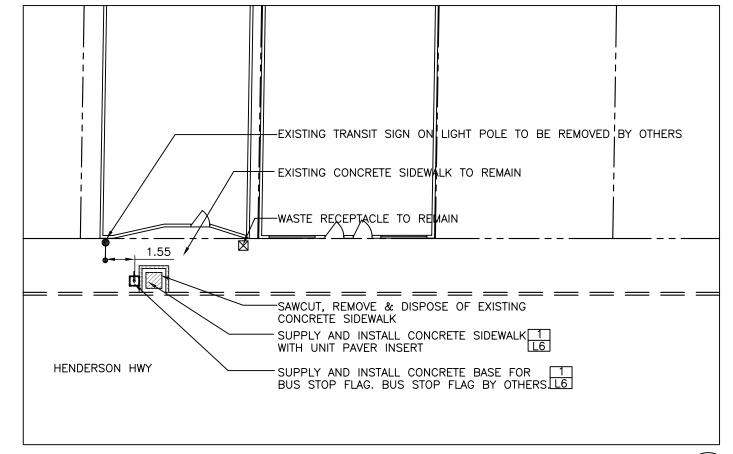


SOUTHBOUND HENDERSON OPP. DEARBORN STOP 40443 DEARBORN

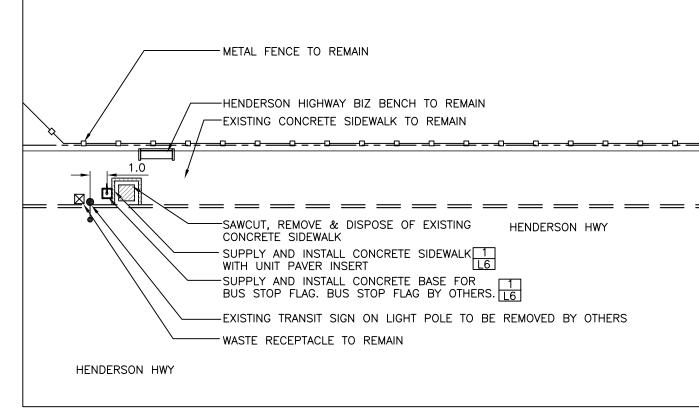

SOUTHBOUND HENDERSON N/S HESPLER STOP 40437 HESPLER NORTH

NORTH

NORTH

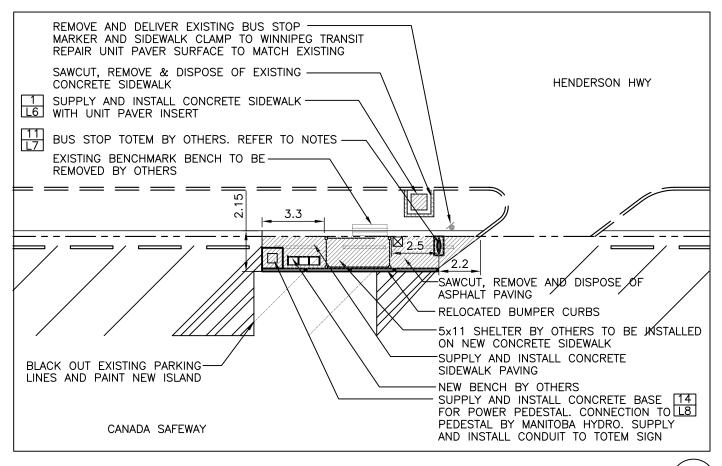

NORTHBOUND HENDERSON N/S KIMBERLEY STOP 40379 KIMBERLEY

NORTHBOUND HENDERSON OPP. WHELLAMS

SAWCUT, REMOVE & DISPOSE OF EXISTING -

1 SUPPLY AND INSTALL CONCRETE SIDEWALK -

PEDESTAL BY MANITOBA HYDRO, SUPPLY

AND INSTALL CONDUIT TO TOTEM SIGN

11] SUPPLY & INSTALL CONCRETE BASE FOR BUS

STOP TOTEM. BUS STOP TOTEM BY OTHERS.

REMOVE AND DELIVER EXISTING BUS STOP -

5x11 SHELTER BY OTHERS TO BE INSTALLED -

MARKER AND SIDEWALK CLAMP TO WINNIPEG TRANSIT

SUPPLY AND INSTALL CONCRETE SIDEWALK PAVING

XISTING SHELTER AND BASE TO BE REMOVED

BY OTHERS. REPAIR EXISTING SOD

STOP 40393 WHELLEMS


BY OTHERS

14 SUPPLY AND INSTALL CONCRETE BASE FOR POWER PEDESTAL. CONNECTION TO


ON NEW CONCRETE SIDEWALK

CONCRETE SIDEWALK


L6 WITH UNIT PAVER INSERT

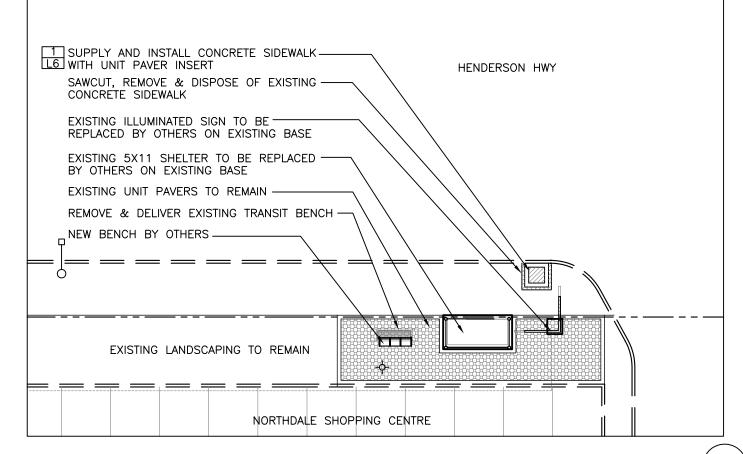



NORTHBOUND HENDERSON OPP FRASER'S GROVE STOP 40385 NORTHDALE

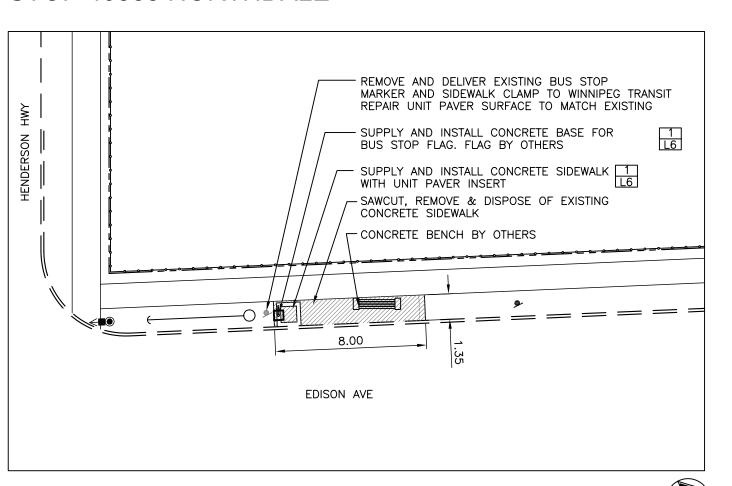


WESTBOUND EDISON N/S HENDERSON STOP 40585 HENDERSON

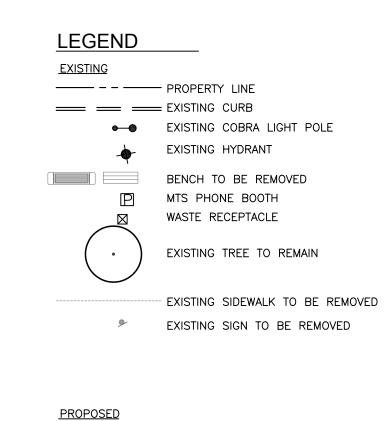

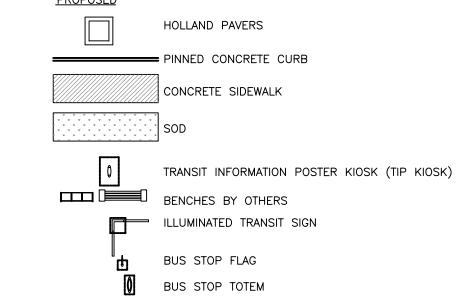

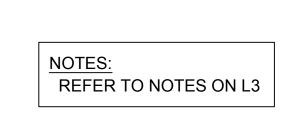

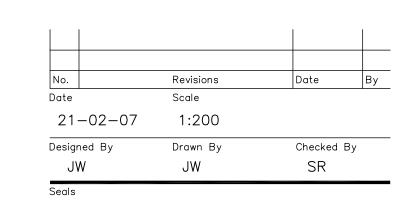

NORTH



WINNIPEG TRANSIT

**BUS STOP UPGRADE PROGRAM** PHASE 2 - SITE WORKS

**HENDERSON HIGHWAY** LAYOUT PLANS Project No. 06-029

FILE: /DWG/2007 STOPS/WKG DWG/HENDERSON STOPS.dwg

STOP 40390 EDISON