


Planters should be constructed of No.2 grade spruce or better and stained with Tung Oil prior to construction. All sections must be fastened with wood screws or lag bolts. Corners must overlap and have interior support. Any linear span greater than 4' requires a vertical support stay. If building planter more than one board high, fasten all boards together with iron L-bracket to prevent bulging. Note that the L-brackets that are to be used for vertical support stay are to be attached 102mm below the top board and are to be cut straight across and rounded over with a grinder to remove sharp edge. All corner L-brackets are to be cut on a 45 degree angle into the planter and rounded over with a grinder to remove sharp edge.


Drawing Title:

Drawing No:

# ACCESSIBLE PLANTER DETAIL SCD-653A 4'X8' RAISED MULTI-LEVEL

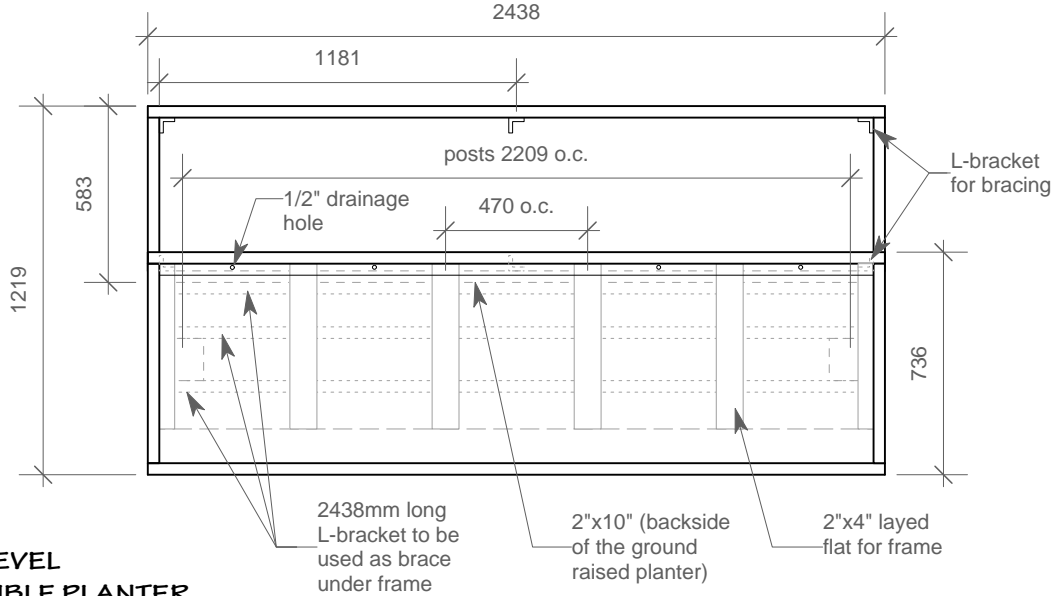

**MULTI-LEVEL  
ACCESSIBLE PLANTER  
PLAN  
NTS**

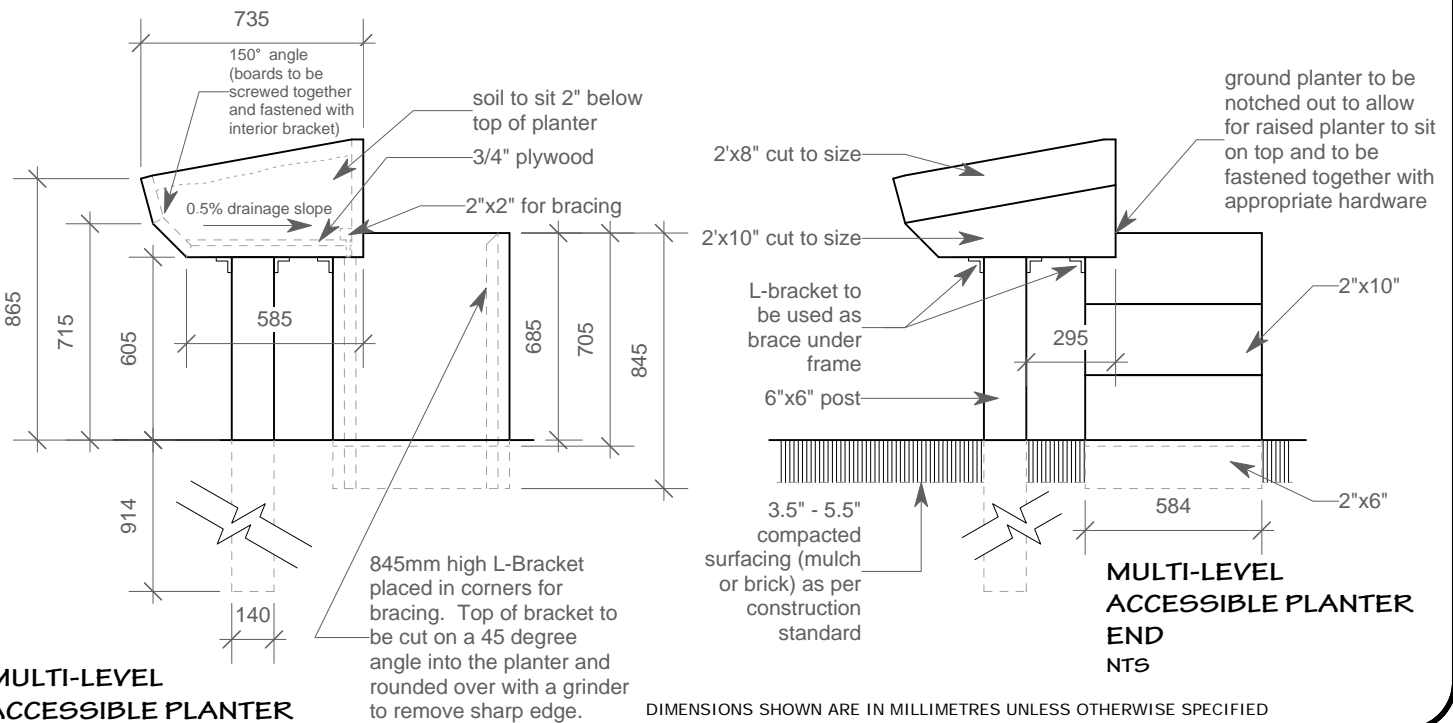

**MULTI-LEVEL  
ACCESSIBLE PLANTER  
SECTION  
NTS**

**MULTI-LEVEL  
ACCESSIBLE PLANTER  
END  
NTS**

DIMENSIONS SHOWN ARE IN MILLIMETRES UNLESS OTHERWISE SPECIFIED

DATE: MAY 2010  
SCALE: N.T.S.  
DRAWN BY: N. SELBY

The City of Winnipeg  
Planning, Property and Development Department  
Planning and Land Use Division  
Unit 15 - 30 Fort Street, Winnipeg, MB, R3C 4X5

