


TITLE

Pedra Double Timber Edging Detail

SCD 651AR

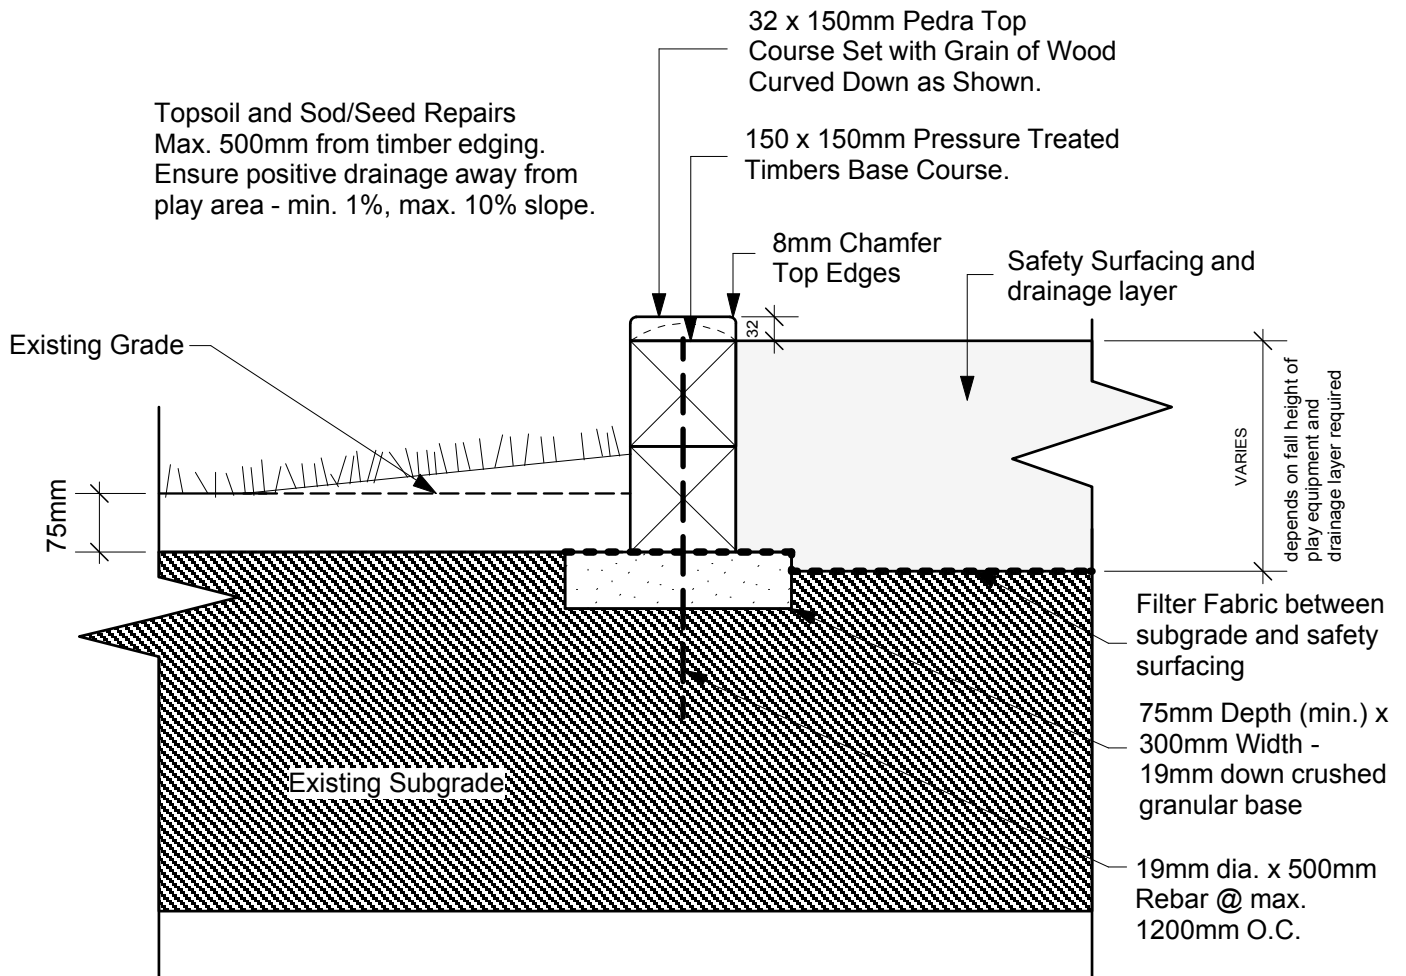

Base course timber shall be pinned with minimum of two (2) 19mm dia. rebar @ max. 1200mm O.C.
Pedra top course shall be pre-drilled and screwed down using screws treated for ACQ use and sized to suit. Two parallel screws at each end of the timbers and at 600mm O.C. along length and at ends. Only use butt joints for straight sections of pedra. Min. length of timbers to be 1200mm. Install longest lengths possible.

NOTE:

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

Scale: NTS

Drawn By: H.F.

Date: Jan.09

THE CITY OF WINNIPEG
Planning, Property and Development Department
Planning and Land Use Division
Unit 15 - 10 Fort Street, Winnipeg, MB, R3C 4X5

