


TITLE

# Single Timber Edging Detail w/ Asphalt Ramp

SCD 651d

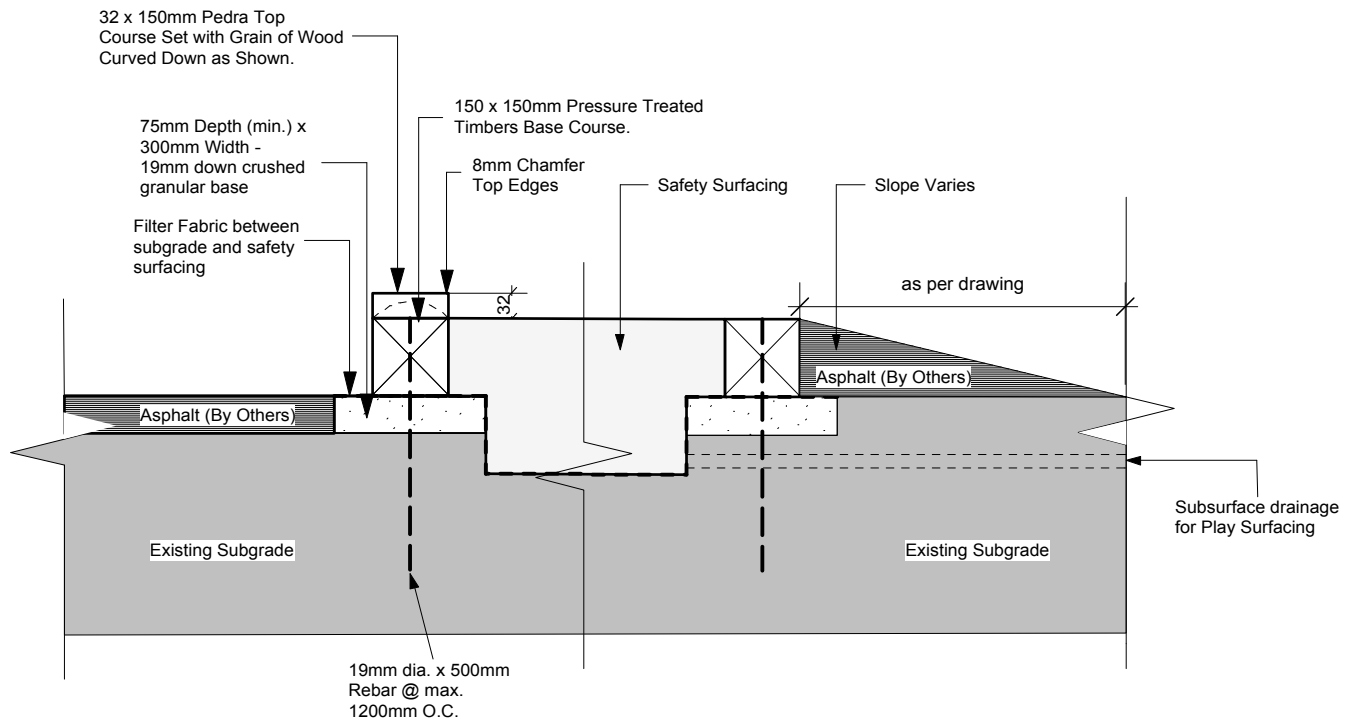

Base course timber shall be pinned with minimum of two (2) 19mm dia. rebar @ max. 1200mm O.C. Pedra top course shall be pre-drilled and screwed down using screws treated for ACQ use and sized to suit. Two screws at each end and at every 600mm opposite sides along length. Only use butt joints for straight sections of pedra. Min. length of timbers to be 1200mm. Install longest lengths possible.

**NOTE:**  
ALL DIMENSIONS SHOWN  
ARE IN MILLIMETERS.

Scale: NTS

Drawn By: H.F.

Date: March 2011

THE CITY OF WINNIPEG  
Planning, Property and Development Department  
Planning and Land Use Division  
Unit 15 - 10 Fort Street, Winnipeg, MB, R3C 4X5

