


TITLE

Pedra Double Timber Edging Detail

SCD 651AR

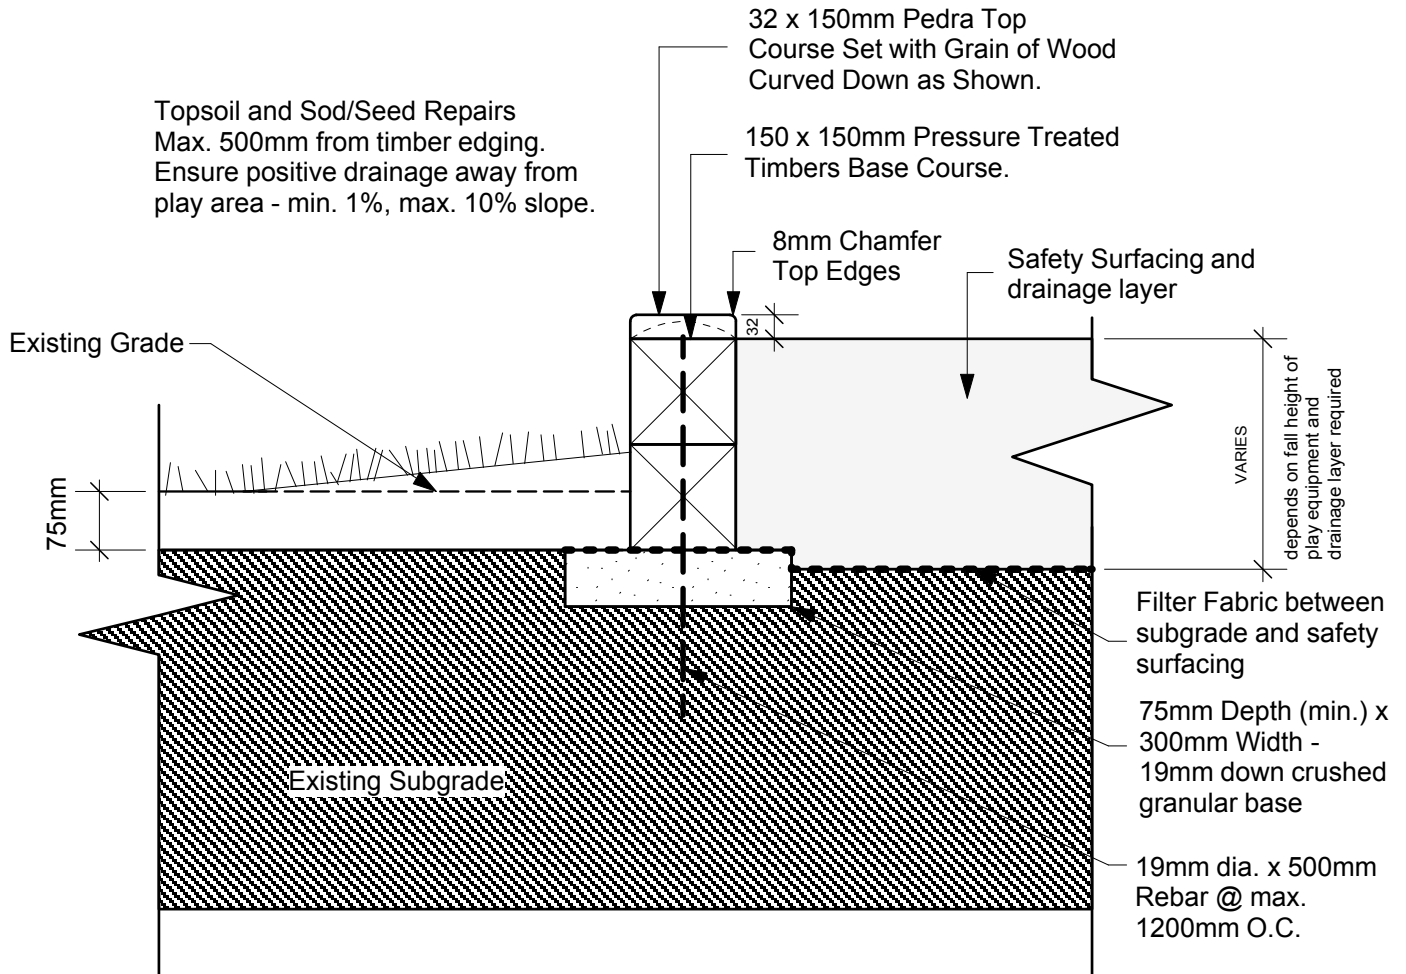

Base course timber shall be pinned with minimum of two (2)
19mm dia. rebar @ max. 1200mm O.C.
Pedra top course shall be pre-drilled and screwed down using
screws treated for ACQ use and sized to suit. Two parallel screws
every 600mm O.C. along length and at ends. Only use butt joints
for straight sections of pedra. Min. length of timbers to be
1200mm. Install longest lengths possible.

NOTE:

ALL DIMENSIONS SHOWN
ARE IN MILLIMETERS.

Scale: NTS

Drawn By: H.F.

Date: Jan.09

THE CITY OF WINNIPEG
Planning, Property and Development Department
Planning and Land Use Division
Unit 15 - 10 Fort Street, Winnipeg, MB, R3C 4X5

