


Trex Cap to be predrilled and screwed to Base course using screws. Screws shall be Stainless Steel or Ceramic Coated and appoved for use with ACQ treated wood. Screws to extend into timber base a minimum of 5 cm and be countersunk into Trex . Two screws are to be placed at each end and every 60 cm alonge length. Straight sections Trex are to be butt jointed.

Limestone Sod to be below top of timbersas per grading drawing. Sod is to drain away from timbers. Minimum 1/2 of bottom tier of

Compacted 20 mm ø down

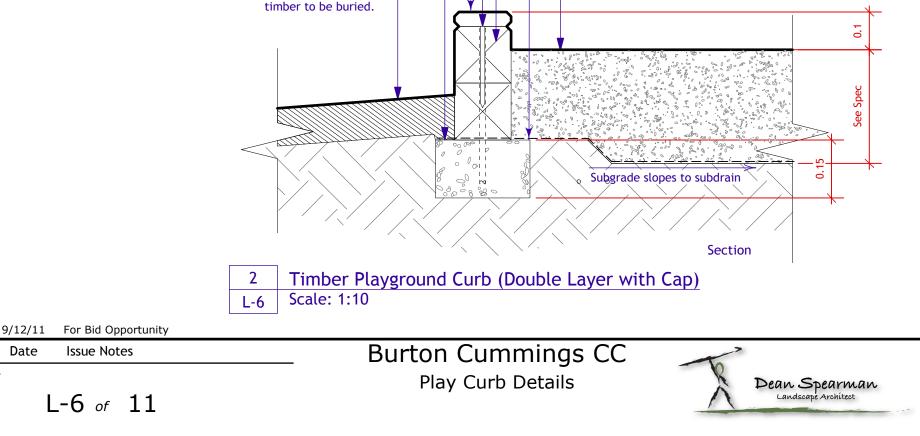

4/23/10

2

No.

Drawing No.