


# Single Timber Edging With Cap

**SCD-651**

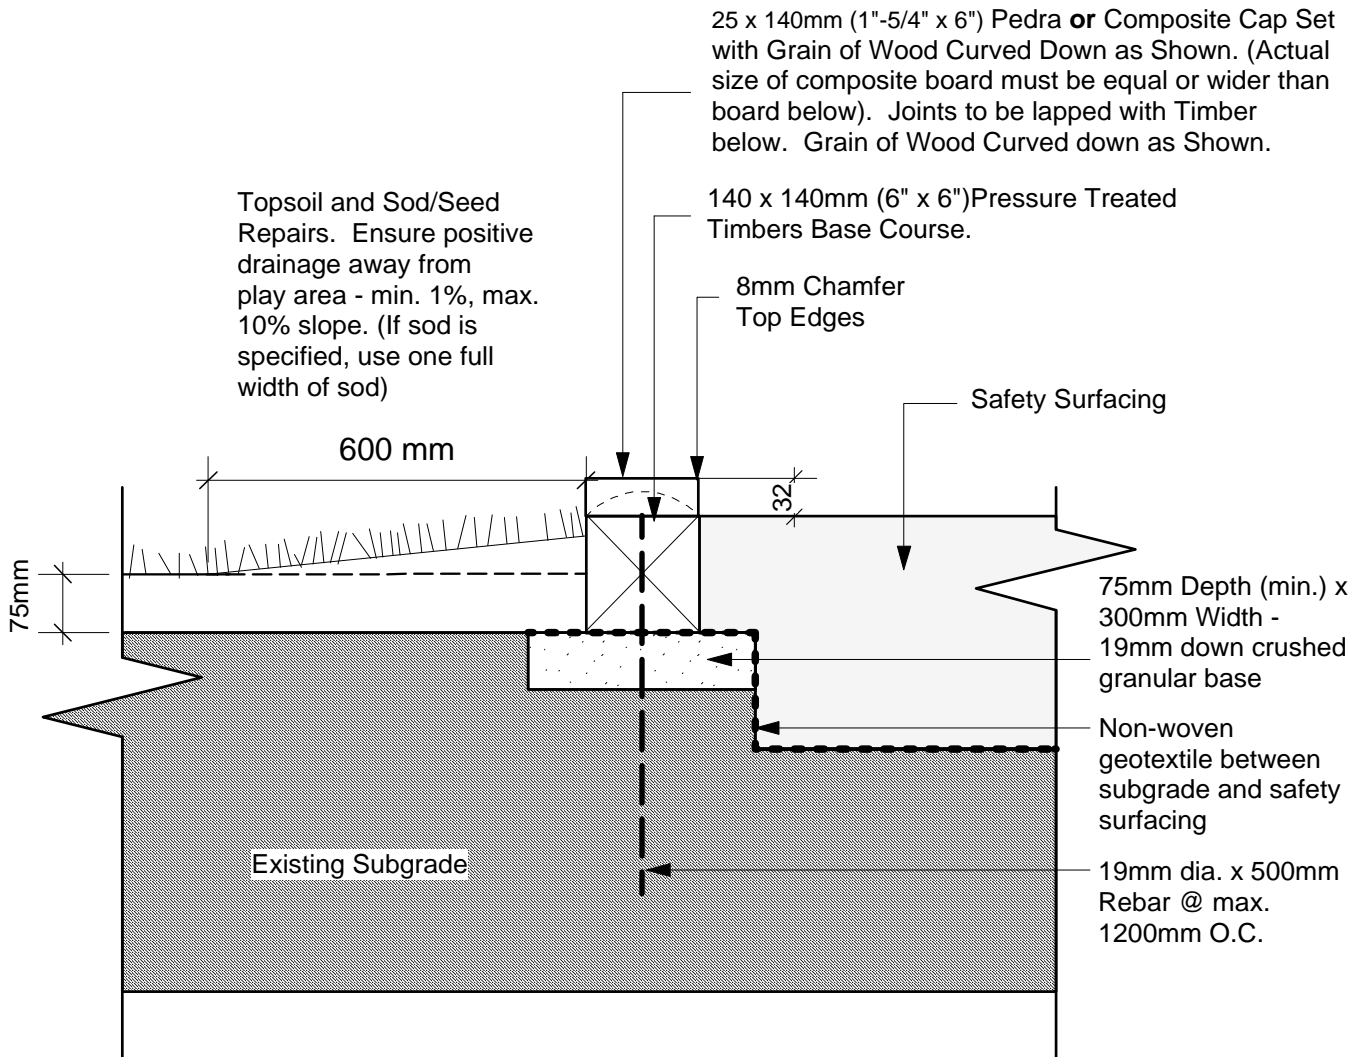

**Base course timber :**

- shall be pinned with minimum of two (2) 19mm dia. rebar @ max. 1200mm O.C.

**Cap:**

- shall be pre-drilled and screwed down using screws treated for ACQ use and sized to suit. Screws to extend into timber base at min. 50mm and to be countersunk into cap. Two parallel screws every 600mm O.C. along length and at ends. Only use butt joints for straight sections of pedra. Min. length of timbers to be 1200mm. Install longest lengths possible.

DIMENSIONS SHOWN ARE IN MILLIMETRES UNLESS OTHERWISE SPECIFIED

REVISION: 1  
 DATE: January 12, 2012  
 SCALE: NTS  
 DRAWN BY: SP

The City of Winnipeg  
 Planning, Property and Development Department  
 Planning and Land Use Division  
 Unit 15 - 30 Fort Street, Winnipeg, MB, R3C 4X5

