

GENERAL NOTES

- 1. SCUPPER MUST BE PREFABRICATED. LAPS MUST BE FULLY SOLDERED.
- 2. SCUPPER MUST BE INSPECTED BY THE CONSULTANT PRIOR TO INSTALLATION.
- . INSTALL SCUPPER OVER THE BASE SHEET IN A FULL BED OF COMPATIBLE CEMENT IN THE SCUPPER OPENING.
- 4. FIELD VERIFY DIMENSIONS H & W.
- 5. SCUPPER MUST BE WRAPPED WITH PREFINISHED METAL, OR PAINTED TO MATCH.

RMIS ENGINEERING



389 MAXWELL CRESCENT Regina, SK S4N 5X9 www.rmiseng.ca Phone 306.352.4606 Fax 306.352.4607




WESTWOOD LIBRARY C.13.MB.35-18.02.03


> 66 ALLARD AVENUE WINNIPEG, MB R3K 0T3





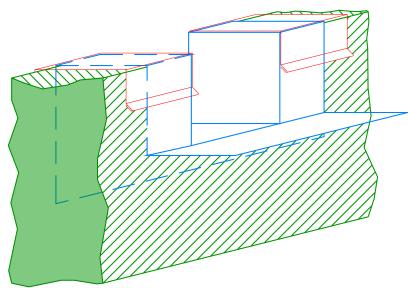



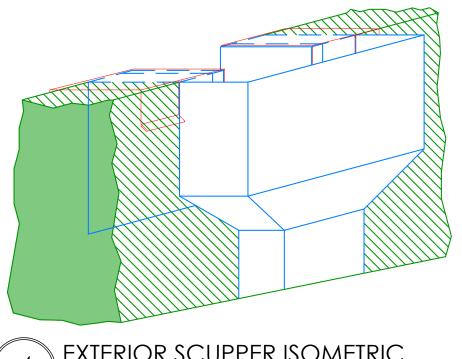

	EXTERIOR SCUPPER ISOMETRIC
4 '	NTS - WITHOUT DIMENSIONS

